# 1.9inch 4-line-SPI IPS Module MSP1901 User Manual

## **Product Description**

This product is a 1.9inch IPS display module, it has a resolution of 170x320.it uses a 4-wire SPI communication method and the inner IC is ST7789. The module contains an LCD display and PCB backboard.

### **Product Features**

- 1.9-inch color screen, support 65K color display, display rich colors
- 170X320 resolution, clear display
- Large viewing angle(full angle), display color undistorted.
- Using the 4-line-SPI serial bus, it only takes a few IOs to illuminate the display
- Provide a rich STM32, C51 and MSP430 sample program
- Military-grade process standards, long-term stable work
- Provide underlying driver technical support

### **Product Parameters**

Name	Description
Display Color	RGB 65K color
SKU	MSP1901
Screen Size	1.9(inch)
Туре	TFT
Driver IC	ST7789
Resolution	170*320 (Pixel)
Module Interface	4-line SPI interface
Active Area	22.695x42.72 (mm)
Touch Screen Type	have no touch screen
Touch IC	have no touch IC
Module PCB Size	29.00x62.00(mm)

Angle of view	all angle
Operating Temperature	-10℃~60℃
Storage Temperature	-20℃~70℃
Operating Voltage	3.3V
Power Consumption	TBD
Product Weight(With packaging)	13(g)

# Interface Description



Picture1. Module pin Label picture

### important:

- 1. The following pin numbers 1~8 refer to the module pin numbers of our company with PCB backplane. If you are buying a bare screen, please refer to the pin definition of the bare screen specification, refer to the wiring according to the signal type instead of directly according to the following. The module pin number is used for wiring. For example: DC is 6 feet on our module. It may be x pin on different size bare screen.
- 2. About VCC supply voltage: The IPS display module can only be connected to 3.3V.
- 3. About backlight voltage: The module with PCB backplane has integrated triode backlight control circuit, only need to input high level or PWM wave on BL pin to backlight. If you are buying a bare screen, the LEDAx is connected to 3.0V-3.3V, and the LEDKx can be grounded.

Nu	umber	Module Pin	Pin Description
	1	GND	LCD Power ground
	2	VCC	LCD power supply is positive (3.3V)
	3	SCL	LCD SPI bus clock signal
$\overline{A}$	4	SDA	LCD SPI bus write data signal
	5	RES	LCD reset control signal(Low level reset)
	6	DC	LCD register / data selection control signal(Low level: register, high level: data)
	7	CS	LCD chip select control signal (low level enable)
	8	BLK	LCD backlight control signal (high level lighting, if you do not need control, please connect 3.3V)

### Hardware Configuration

The LCD module hardware circuit comprises two parts: an LCD display control circuit and a backlight control circuit.

The LCD display control circuit is used to control the pins of the LCD, including control pins and data transfer pins.

The backlight control circuit is used to control the backlight to be on and off. Of course, if the backlight is not required to be be on and off, can be directly connected to the 3.3V power supply.

### working principle


### 1. Introduction to ST7789 Controller

The ST7789 controller supports a maximum resolution of 240\*320 and a 172800-byte GRAM. It also supports 8-bit, 9-bit, 16-bit, and 18-bit parallel port data buses. It also supports 3-wire and 4-wire SPI serial ports. Since parallel control requires a large number of IO ports, the most common one is SPI serial port control. The ST7789 also supports 65K, 262K RGB color display, display color is very rich, while supporting rotating display and scroll display and video playback, display in a variety of ways.

The ST7789 controller uses 16bit (RGB565) to control a pixel display, so it can display up to 65K colors per pixel. The pixel address setting is performed in the order of rows and columns, and the incrementing and decreasing direction is determined by the scanning mode. The ST7789 display method is performed by setting the address and then setting the color value.

### 2. Introduction to SPI communication protocol

The 4-wire SPI bus write mode timing is shown in the following figure:

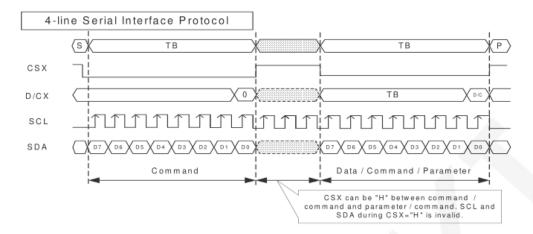


CSX is a slave chip select, and the chip is enabled only when CSX is low.

D/CX is the data/command control pin of the chip. When DCX is low, the command is written. When it is high, the data is written.

SCL is the SPI bus clock, and each rising edge transmits 1 bit of data;

SDA is the data transmitted by SPI, and it transmits 8-bit data at a time. The data format is as shown below:

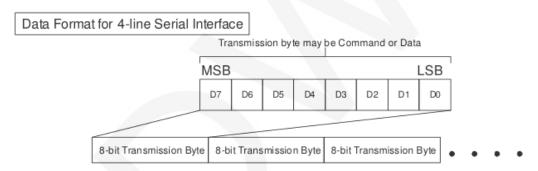

The high position is in front and transmitted first.

For SPI communication, the data has a transmission timing, that is, a combination of clock phase (CPHA) and clock polarity (CPOL):

The CPOL level determines the idle state level of the serial synchronous clock, CPOL = 0, which is low. CPOL does not have a lot of impact on the transport protocol;

The level of CPHA determines whether the serial synchronous clock is acquired on the first clock transition edge or the second clock transition edge.

When CPHL = 0, data acquisition is performed on the first edge of the transition;

The combination of the two becomes the four SPI communication methods. SPI0 is usually used in China, that is, CPHL = 0, CPOL = 0.

# Instructions for use

### 1. STM32 instructions

### Wiring instructions:

See the interface description for pin assignments.

STM32F103C8T6 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to MiniSTM32 development board wiring pin
1	GND	GND
2	vcc	3.3V
3	SCL	PA5
4	SDA	PA7
5	RES	PB8
6	DC	PB7
7	CS	PB9
8	BLK	PB6

STM32F103RCT6 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to MiniSTM32 development board wiring pin
1	GND	GND
2	VCC	3.3V
3	SCL	PB13
4	SDA	PB15
5	RES	PB12
6	DC	PB10
7	CS	PB11
8	BLK	PB9

STM32F103ZET6 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to Elite STM32 development board wiring pin
1	GND	GND
2	VCC	3.3V
3	SCL	PB13
4	SDA	PB15
5	RES	PB12
6	DC	PB10
7	CS	PB11
8	BLK	PB9

STM32F407ZGT6 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to Explorer STM32F4 development board wiring pin
1	GND	GND
2	vcc	3.3V
3	SCL	PB3
4	SDA	PB5
5	RES	PB12
6	DC	PB14
7	CS	PB15
8	BLK	PB13

STM32F429IGT6 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to Apollo STM32F4/F7 development board wiring pin
1	GND	GND
2	vcc	3.3V
3	SCL	PF7
4	SDA	PF9
5	RES	PD12
6	DC	PD5
7	cs	PD11
8	BLK	PD6


STM32F767IGT6 and STM32H743IIT6 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to Apollo STM32F4/F7 development board wiring pin
1	GND	GND
2	vcc	3.3V
3	SCL	PB13
4	SDA	PB15
5	RES	PD12
6	DC	PD5
7	CS	PD11
8	BLK	PD6

### **Operating Steps:**

- A. Connect the IPS module and the STM32 MCU according to the above wiring instructions, and power on;
- B. Select the test example according to the model of the microcontroller, as shown

in the following figure:

(Please refer to the test program description document in the test package for the test program description)

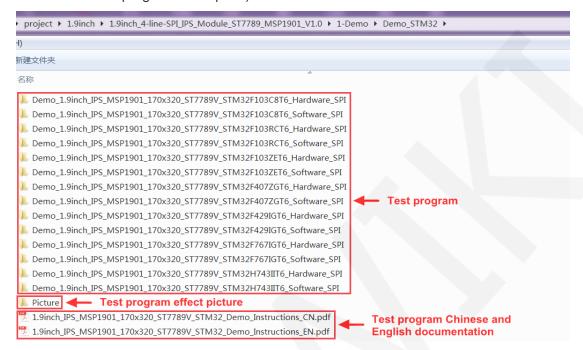

C. Open the selected test program project, compile and download; detailed description of the STM32 test program compilation and download can be found in the following document:

http://www.lcdwiki.com/res/PublicFile/STM32 Keil Use Illustration EN.pdf

D. If the IPS module displays characters and graphics normally, the program runs successfully:

### 2. C51 instructions

### Wiring instructions:


See the interface description for pin assignments.

STC89C52RC and STC12C5A60S2 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to STC89/STC12 development board wiring pin
1	GND	GND
2	vcc	3.3V
3	SCL	P17

4	SDA	P15
5	RES	P33
6	DC	P12
7	cs	P13
8	BLK	P32

### **Operating Steps:**

- A. Connect the IPS module and the C51 MCU according to the above wiring instructions, and power on;
- B. Select the C51 test program to be tested, as shown below:
   (Please refer to the test program description document in the test package for the test program description)

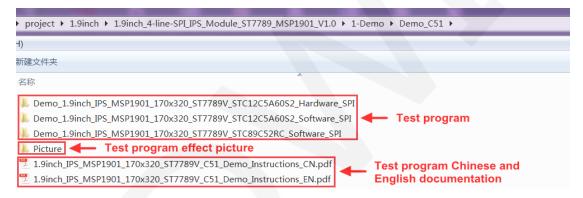

- C. Open the selected test program project, compile and download; detailed description of the C51 test program compilation and download can be found in the following document:
- D. If the IPS module displays characters and graphics normally, the program runs successfully;

http://www.lcdwiki.com/res/PublicFile/C51\_Keil%26stc-isp\_Use\_Illustration\_EN.pdf

### 3. MSP430 instructions


### Wiring instructions:

See the interface description for pin assignments.

MSP430F149 microcontroller test program wiring instructions		
Number	Module Pin	Corresponding to MSP430 development board wiring pin
1	GND	GND
2	vcc	3.3V
3	SCL	P33
4	SDA	P31
5	RES	P22
6	DC	P21
7	CS	P23
8	BLK	P20

### **Operating Steps:**

- A. Connect the IPS module and the MSP430 MCU according to the above wiring instructions, and power on;
- B. Select the MSP430 test program to be tested, as shown below:
   (Please refer to the test program description document in the test package for the test program description)

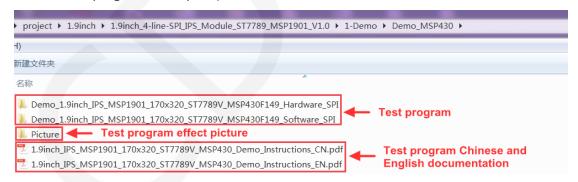

C. Open the selected test program project, compile and download; detailed description of the MSP430 test program compilation and download can be found in the following document:

http://www.lcdwiki.com/res/PublicFile/IAR IDE%26MspFet Use Illustration EN.pdf


D. If the IPS module displays characters and graphics normally, the program runs successfully;

### Software Description

### 1. Code Architecture

#### A. C51, STM32 and MSP430 code architecture description

The code architecture is shown below:

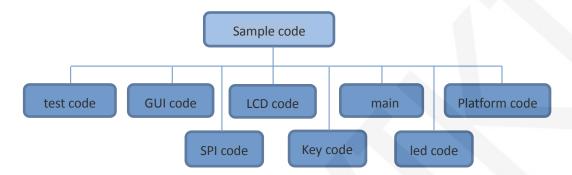

The Demo API code of the main program runtime is included in the test code;

LCD initialization and related operations are included in the LCD code;

Drawing points, lines, graphics, and Chinese and English character display related operations are included in the GUI code;

The main function implements the application to run;

Platform code varies by platform;

SPI initialization and configuration related operations are included in the SPI code;

The key processing related code is included in the key code (the C51 and MSP 430 platform does not have a button processing code);

The code related to the led configuration operation is included in the led code(the MSP 430 platform does not have a led code);

### 2. software SPI and hardware SPI description

The IPS module provides software SPI and hardware SPI sample code (except STC89C52RC, because it does not have hardware SPI function), the two sample code does not make any difference in the display content, but the following aspects are different:

### A. display speed

The hardware SPI is significantly faster than the software SPI, which is determined

by the hardware.

#### B. GPIO definition

The software SPI all control pins must be defined, any idle pin can be used, the hardware SPI data and clock signal pins are fixed (depending on the platform), other control pins should be defined by themselves, or any idle reference can be used. foot.

### C. initialization

When the software SPI is initialized, only the GPIO for pin definition needs to be initialized (not required by the C51 platform). When the hardware SPI is initialized, the relevant control registers and data registers need to be initialized.

### 3. GPIO definition description

### A. STM32 test program GPIO definition description

non-SPI GPIO definition is placed in lcd.h as shown below(take STM32F103RCT6 microcontroller FSMC test program as an example):

All pin definitions can be modified and can be defined as any other free GPIO.

If you are using a hardware SPI test program, you do not need to define the GPIO of the SPI.

If you use the software SPI test program, the SPI GPIO definition is placed in spi.h, as shown below (take STM32F103RCT6 microcontroller test program as an example):

```
#define LCD_CTRL GPIOB //定义TFT数据端口
#define SPI_SCLK GPIO_Pin_13 //PB13--->>TFT --SCL/SCK
#define SPI_MISO GPIO_Pin_14
#define SPI_MOSI GPIO_Pin_15 //PB15 MOSI--->>TFT --SDA/DIN
```

all pin definitions can be modified and can be defined as any other free GPIO.

### B. C51 test program GPIO definition description

GPIO definition is placed in the lcd.h file, as shown below:

If the software SPI is used, all pin definitions can be modified and can be defined as any other free GPIO.

If hardware SPI is used, the LCD\_BL, LCD\_RS, LCD\_CS, and LCD\_RST pin definitions can be modified and can be defined as any other free GPIO. LCD\_CLK and LCD\_SDI do not need to be defined.

### C. MSP430 test program GPIO definition description

non-SPI GPIO definition is placed in lcd.h as shown below:

All pin definitions can be modified and can be defined as any other free GPIO.

If you are using a hardware SPI test program, you do not need to define the GPIO of the SPI

If you use the software SPI test program, the SPI GPIO definition is placed in spi.h, as shown below:

```
//本测试程序使用的是软件SPI接口驱动
//SPI时钟信号以及SPI读、写信号引牌都可以更改
#define SPI_SCLK BIT3 //P33
#define SPI MOSI BIT1 //P31
```

all pin definitions can be modified and can be defined as any other free GPIO.

### 4. SPI communication code implementation

### A. STM32 test program SPI communication code implementation

Hardware SPI communication is implemented by the system. We only need to operate the register and call the relevant function. For details, please refer to the MCU related documentation.

The software SPI communication code is implemented in spi.c ,as shown in the following figure:

```
void SPIv_WriteData(u8 Data)
{
  unsigned char i=0;
  for(i=8;i>0;i--)
  {
    if(Data&0x80)
       LCD_SDA_SET; //输出数据
    else
       LCD_SDA_CLR;
    LCD_SCL_CLR;
    LCD_SCL_SET;
    Data<<=1;
  }
}</pre>
```

If the transmitted data bit is 1, the SPI data pin is pulled high. When it is 0, the SPI data pin is pulled low, one byte of data is transferred each time, the upper bit is first, and one bit of data is transmitted on each rising edge of the clock.

### B. C51 test program SPI communication code implementation

The software SPI communication code is implemented in lcd.c ,as shown in the following figure:

```
void spi_write_byte(u8 d)
{
    u8 val=0x80;
    while(val)
    {
        if(d&val)
        {
            LCD_SDI = 1;
        }
        else
        {
            LCD_SDI = 0;
        }
        LCD_CLK = 0;
        LCD_CLK = 1;
        val>>=1;
    }
}
```

If the transmitted data bit is 1, the SPI data pin is pulled high. When it is 0, the SPI data pin is pulled low, one byte of data is transferred each time, the upper bit is first, and one bit of data is transmitted on each rising edge of the clock.

#### C. MSP430 test program SPI communication code implementation

The software SPI communication code is implemented in spi.c ,as shown in the following figure:

```
:void SPI_WriteByte(u8 Data)
 * @name
 * @date :2018-08-09
* @function :Write a byte of data using STM32's hardware SPI
 * @parameters :SPIx: SPI type,x for 1,2,3
              Byte:Data to be written
* @retvalue :Data received by the bus
**************************************
void SPI_WriteByte(u8 Data)
       unsigned char i=0;
       for(i=8;i>0;i--)
         if (Datas0x80)
         SPI_MOSI_SET; //輸出数据
     else SPI_MOSI_CLR;
     SPI_SCLK_CLR;
     SPI_SCLK_SET;
     Data<<=1;
```

If the transmitted data bit is 1, the SPI data pin is pulled high. When it is 0, the SPI data pin is pulled low, one byte of data is transferred each time, the upper bit is first, and one bit of data is transmitted on each rising edge of the clock.

### Common software

This set of test examples requires the display of Chinese and English, symbols and pictures, so the modulo software is used. There are two types of modulo software:

Image2Lcd and PCtoLCD2002. Here is only the setting of the modulo software for the test program.

The PCtoLCD2002 modulo software settings are as follows:

Dot matrix format select Dark code

the modulo mode select the progressive mode

Take the model to choose the direction (high position first)

Output number system selects hexadecimal number

Custom format selection C51 format

The specific setting method is as follows:

### http://www.lcdwiki.com/Chinese and English display modulo settings

Image2Lcd modulo software settings are shown below:



The Image2Lcd software needs to be set to horizontal, left to right, top to bottom, and low position to the front scan mode.